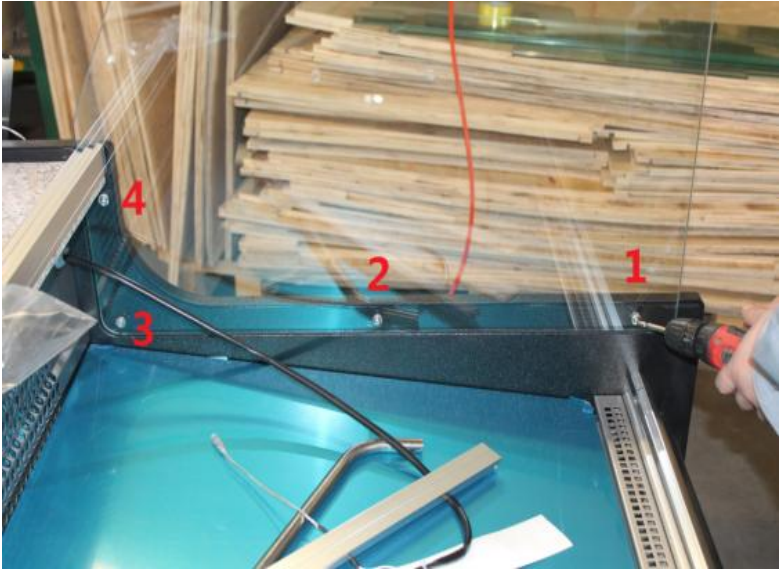


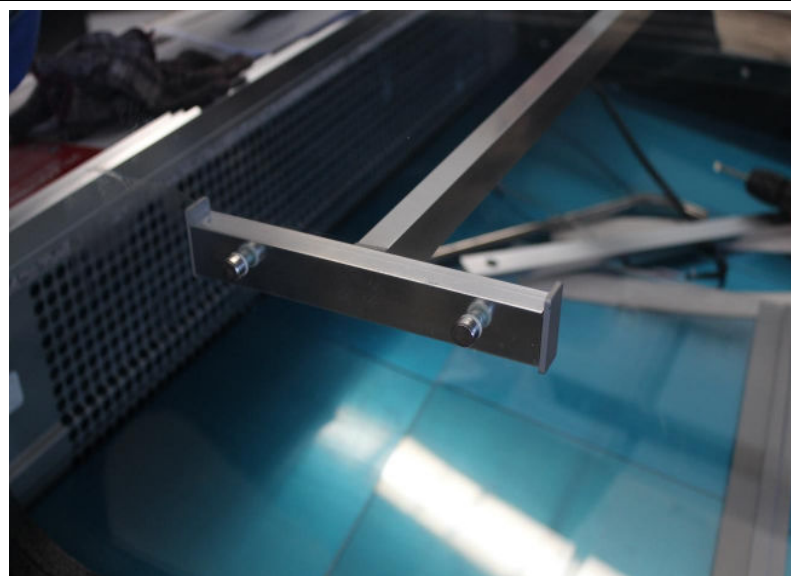
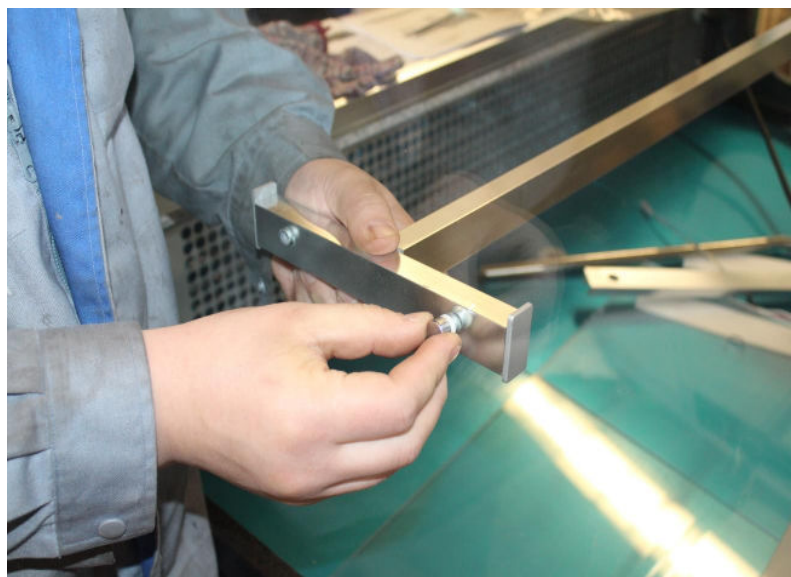


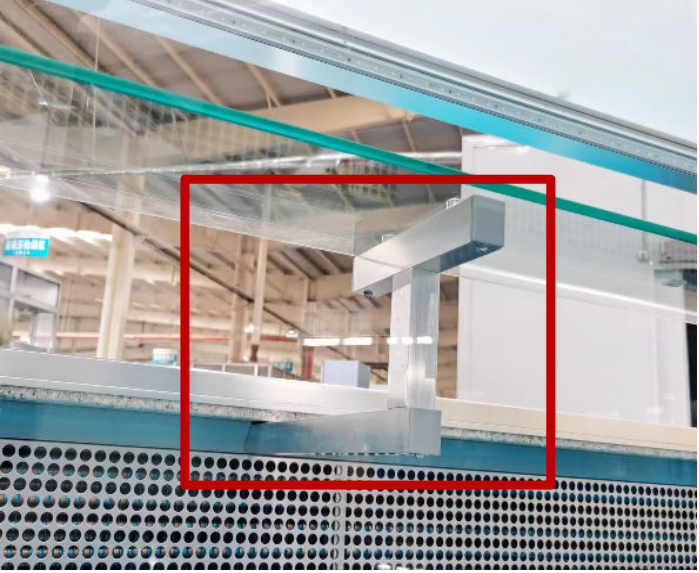


How to install the glass with THERMOCOOL Epicerie series

Step 1	Install side glass with screw *4	
Step 2	Install the glass on the other side with screw	
Step 4	Install middle glass support for NSS1200FG, NSS1500FG	



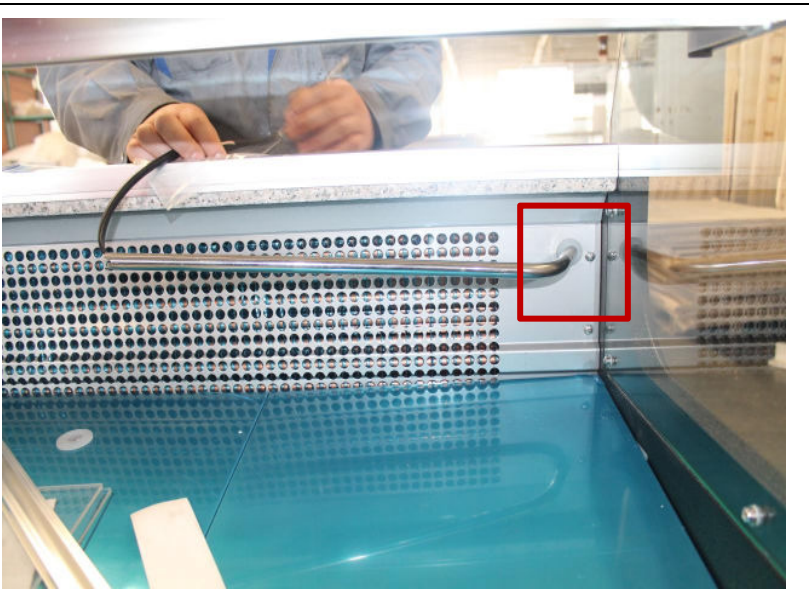
How to install the glass with THERMOCOOL Epicerie series





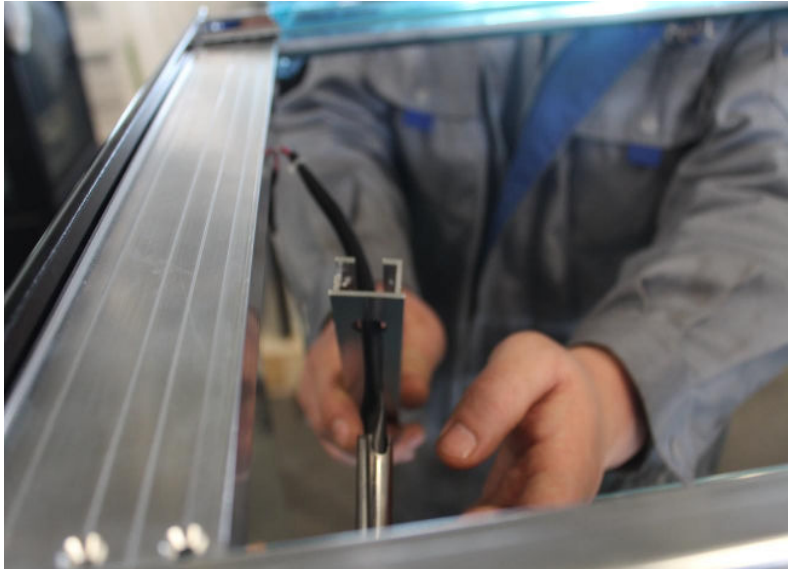
How to install the glass with THERMOCOOL Epicserie series

	<p>Install middle glass support for NSS1800FG, NSS2400FG</p>	
<p>Step 5</p>	<p>Put the middle glass on the support</p>	
<p>Step 6</p>	<p>Install the top frame</p>	




How to install the glass with THERMOCOOL Epicerie series

		
Step 7	Put the cable tube through the wire	
Step 8	Fix the cable tube into the rubber	

How to install the glass with THERMOCOOL Epicerie series

Step 9	Remove the top frame screw near led wire	
Step 10	Detach the component part of the top frame near the LED light	
Step 11	Pass the cable through the hole	

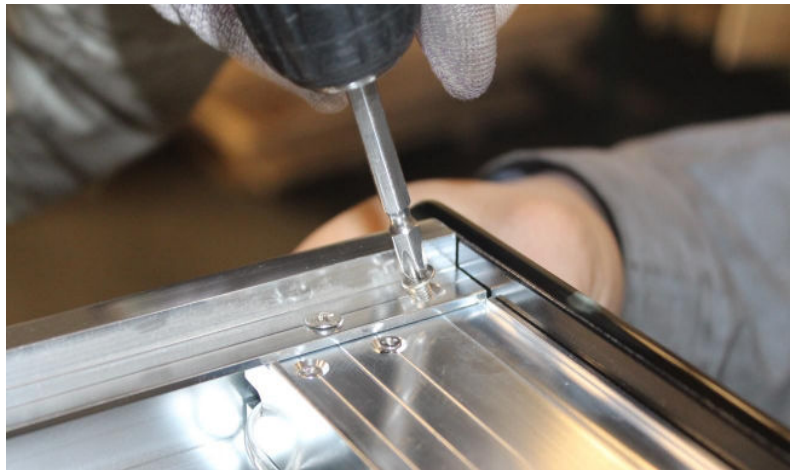
How to install the glass with THERMOCOOL Epicerie series

Step 12	Connect JST	 A close-up photograph showing a person's hands connecting a JST cable connector. The person is wearing a blue long-sleeved shirt. The connector is a small, clear plastic component with a metal pin. The background is slightly blurred, showing a stainless steel surface.
Step 13	Pass the cable tube through the hole	 A photograph of a worker in a blue uniform passing a cable tube through a hole in a metal frame. The worker is looking down at the task. A red square highlights the hole in the metal frame. The background shows a large industrial kitchen with a stainless steel ceiling and various equipment.
Step 14	Back the top frame component part to the original position	 A photograph of a worker in a blue uniform reattaching a top frame component. The worker is using a tool to secure the component. The background shows a large industrial kitchen with a stainless steel ceiling and various equipment.

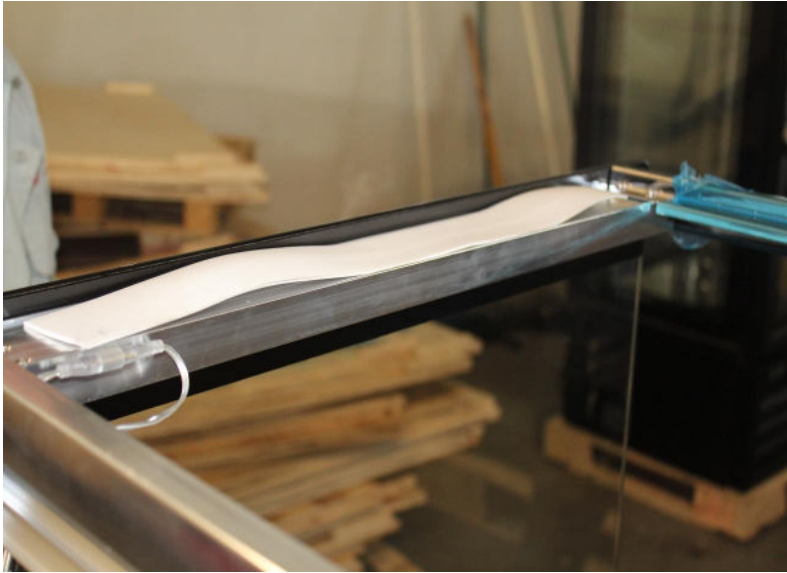
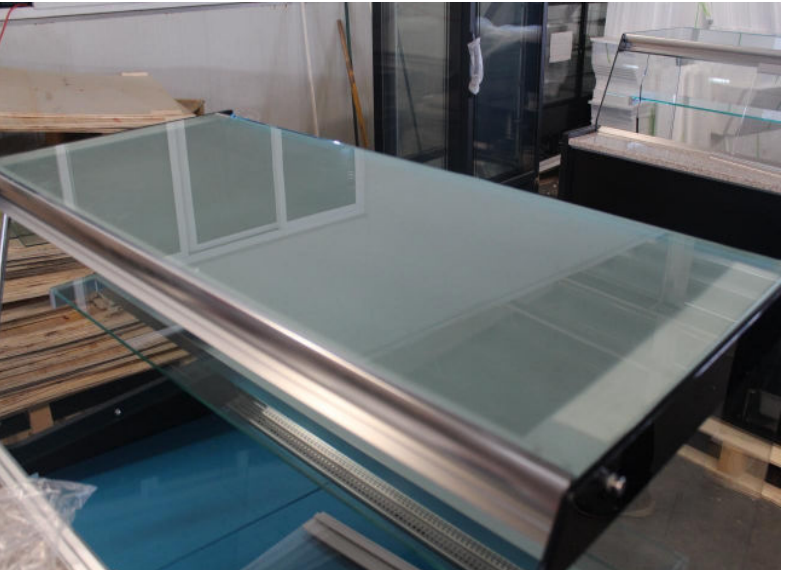
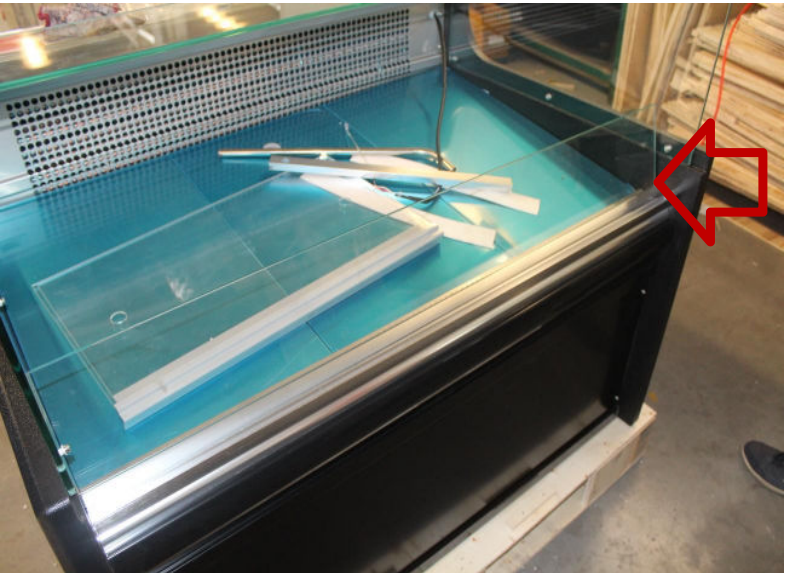
How to install the glass with THERMOCOOL Epicerie series

Step 15

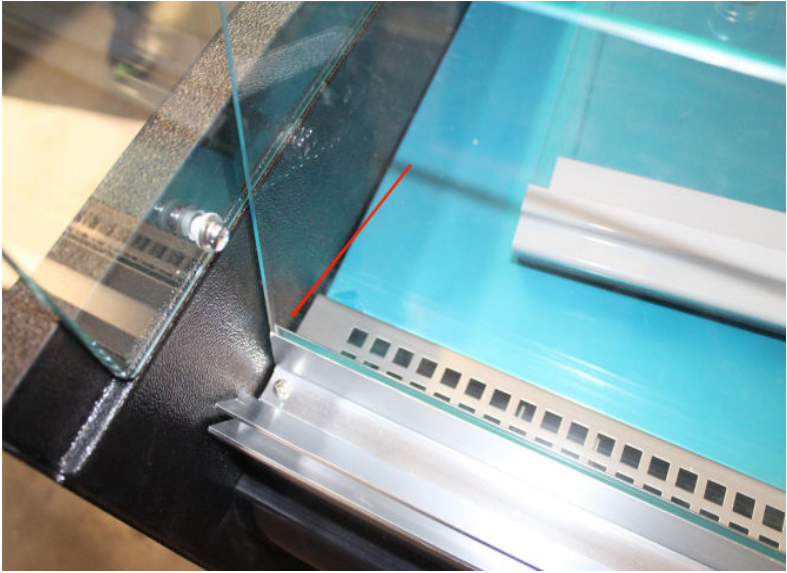
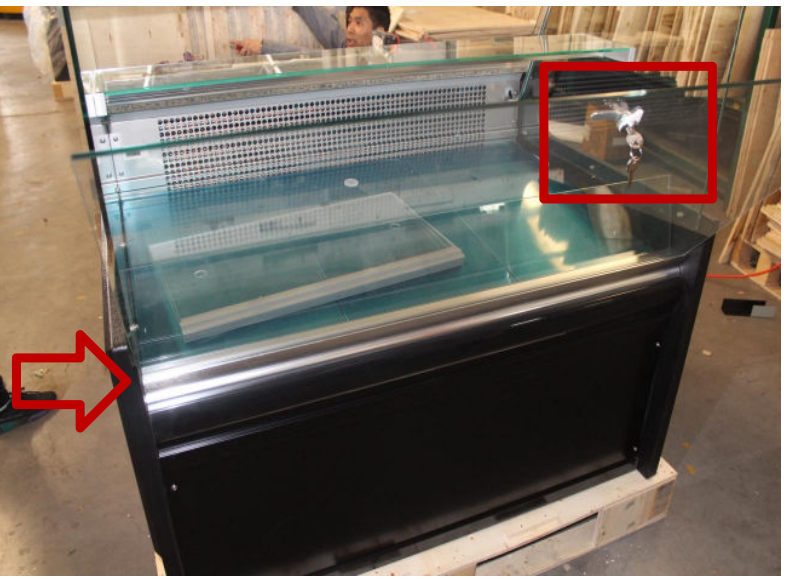
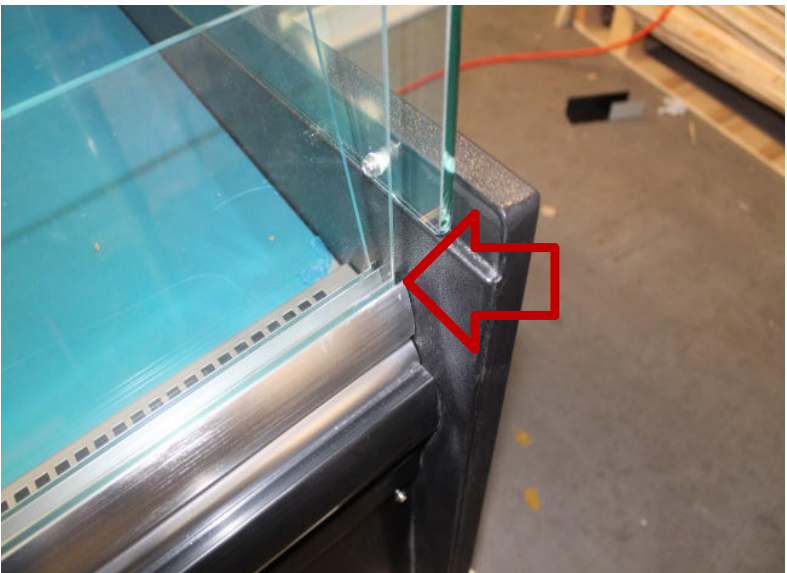
Install the component of the top frame with screw



How to install the glass with THERMOCOOL Epicerie series

Step 15	Put the cushion on two side	
Step 16	Put on the top glass	
Step 17	Insert the glass of air flow conduct board into the slot	

How to install the glass with THERMOCOOL Epicerie series

		 A close-up photograph showing a glass pane being inserted into a metal frame. A red arrow points to the top edge of the glass where it meets the frame.
Step 18	Insert the front glass into the slot, and lock the front glass	 A photograph of the front of the unit with the glass installed. A red arrow points to the left side of the unit, and a red box highlights the lock mechanism on the right side.
		 A close-up photograph of the lock mechanism on the glass. A red arrow points to the lock, which is a small metal piece that fits into a slot on the glass.

How to install the glass with THERMOCOOL Epicserie series

Step 19

Put on the sliding door

